

HEAD LIST

Package	HEAD	Function	EXE.
DIP	HEAD-16V8	32-pin DIP socket. Supports AMD,ATMEL,CYPRESS,LATTICE,NATIONAL, STM 16V8 series.(20-pin DIP)	HPLD1.EXE
DIP	HEAD-22V10	32-pin DIP socket. Supports AMD,ATMEL,LATTICE 22V10 series.(24-pin DIP)	HPLD1.EXE
DIP	HEAD-57CXX	32-pin DIP socket. Supports WSI 57C191C/291C/43C/45C/49C/51C/71C.	HBPPGM.EXE
DIP	HEAD-87C751	32-pin DIP socket. Supports PHILIPS 87C748/49/50/51/52.(24/28-pin DIP)	HMPU2.EXE
DIP	HEAD-87LPC76X	32-pin DIP socket. Supports PHILIPS 87LPC762/764.(20-pin DIP)	HMPU2.EXE
DIP	HEAD-89L516	40-pin DIP socket. Supports MEGAWIN MPC89L516X2.	HMPU2.EXE
DIP	HEAD-AT17XXX	24-pin DIP socket. Supports ATMEL AT17XXX.(8-pin DIP)	HSEEP.EXE
DIP	HEAD-AVR4433	32-pin DIP socket. Supports ATMEL 90S4433/2333,90LS4433/2333, ATtiny28/V/L,ATMEGA8/L.(28-pin DIP)	HMPU1.EXE
DIP	HEAD-AVR8515	40-pin DIP socket. Supports ATMEL 90S4414,90S8515.	HMPU1.EXE
DIP	HEAD-AVR8535	40-pin DIP socket. Supports ATMEL 90S/LS4434,90S/LS8535.	HMPU1.EXE
DIP	HEAD-COP8SXX	40-pin DIP socket. Supports NATIONAL COP8SAA/SAB/SAC/SGESGR720, COP8SAA716,COP8SAB/SAC/SGE/SGR728, COP8SAC/SGE/SGR740.(16/20/28/40-pin DIP)	HCOP.EXE

DIP	HEAD-CY7C264	32-pin DIP socket. Supports CYPRESS CY7C264.(24-pin DIP)	HEP512.EXE
DIP	HEAD-CY8C26XXX	32-pin DIP socket. Supports CYPRESS CY8C25122-24PI,CY8C26233-24PI, CY8C26443-24PI.(8/20/28-pin DIP)	HCY8C2X.EXE
DIP	HEAD-CYUSB1	32-pin DIP socket. Supports CYPRESS CY7C63000/A,CY7C63001/A, CY7C63100/A,CY7C63101/A,CY7C63200,CY7C63201.	HMPU3.EXE
DIP	HEAD-CYUSB2	40-pin DIP socket. Supports CYPRESS CY7C63410/11/12/13.	HMPU3.EXE
DIP	HEAD-CYUSB4	32-pin DIP socket. Supports CYPRESS CY7C63722/723/231.(18-pin DIP)	HMPU3.EXE
DIP	HEAD-CYUSB5	32-pin DIP socket. Supports CYPRESS CY7C63221.(16-pin DIP)	HMPU3.EXE
DIP	HEAD-CYUSB6	32-pin DIP socket. Supports CYPRESS CY7C63742/743.(24-pin DIP)	HMPU3.EXE
DIP	HEAD-DIP32	32-pin DIP socket. Supports byte wide EPROM,EEPROM,FLASH memory in DIP24/28/32 package.	HEP512.EXE HEP1M.EXE HEEP512.EXE HMEM1.EXE
DIP	HEAD-DIP40	40-pin DIP socket. Supports word wide EPROM,EEPROM memory in DIP40 package.	HMEMW.EXE
DIP	HEAD-DIP42V2	42-pin DIP socket. Supports word wide EPROM,EEPROM memory in DIP42 package.	HMEMW.EXE
DIP	HEAD-IS89C64	40-pin DIP socket. Supports ICSI,ISSI IS89C(E)54/58/64.	HMPU51.EXE

DIP	HEAD-KS86P4304	24-pin DIP socket. Supports SAMSUNG KS86P4304.(20-pin DIP)	HMPU1.EXE
DIP	HEAD-MPU2051	32-pin DIP socket. Supports AT89C4051/2051/1051,AT90S1200/2313; HYNIX,LG SEMICON GMS97C2051/1051.(20-pin DIP)	HMPU1.EXE
DIP	HEAD-MPU51	40-pin DIP socket. Supports 87C51/89C51 series.	HMPU51.EXE
DIP	HEAD-MPU51A	40-pin DIP socket. Supports ATMEL 89C55; ISSI 89C51/52,89LV52; PHILIPS 89C738; WINBOND 78E516/58,78LE58.	HMPU51.EXE
DIP	HEAD-MPU51RD2	40-pin DIP socket. Supports MXIC MX10FLCDPC; PHILIPS 89C132/138/238/638/838,89C51/52/54/58 U(XX), 89C51Fx/Rx+/Rx2/66x series.	HMPU2.EXE
DIP	HEAD-MPU8P	32-pin DIP socket. Supports ATMEL 90S/LS2323,90S/LS2343,ATtiny11; MICROCHIP 12C508/509/671/672,12CE518/519/673/674.	HMPU4.EXE
DIP	HEAD-MTV112	40-pin DIP socket. Supports MYSON MTV012/112.	HMPU1.EXE
DIP	HEAD-MTV112M	40-pin DIP socket. Supports MYSON MTV112M.	HMPU1.EXE
DIP	HEAD-MTV212M-D1	40-pin DIP socket. Supports MYSON MTV212MN32,MTV212MN64.	HMPU1.EXE
DIP	HEAD-MTV512X	40-pin DIP socket. Supports MYSON MTV512X,CS8954X.	HMPU1.EXE
DIP	HEAD-P89LPC922	32-pin DIP socket. Supports PHILIPS 89LPC922.(20-pin DIP)	HMPU2.EXE

DIP	HEAD-PIC16C505	32-pin DIP socket. Supports MICROCHIP PIC16C505.(14-pin DIP)	HPIC.EXE
DIP	HEAD-PIC16C54V2	32-pin DIP socket. Supports MICROCHIP PIC16C54/554/556/558/56/58/61/ 620/621/622/71/710/711/712/715/717/84,PIC16CE625, PIC16F627/628/648/818/819/83/84,PIC16LC715/84, PIC16LF83/84.(18-pin DIP)	HPIC.EXE HPIC2.EXE
DIP	HEAD-PIC16C55	32-pin DIP socket. Supports MICROCHIP PIC16C55/57.(28-pin DIP)	HPIC.EXE
DIP	HEAD-PIC16C62	40-pin DIP socket. Supports MICROCHIP PIC16C62/63/64/65/66/67/72/73/ 74/76/765/77/774,PIC16F73/74/76/77/871/872/873/874/ 876/877.(28/40-pin DIP)	HPIC.EXE HPIC18.EXE HPIC2.EXE
DIP	HEAD-PIC17C42	40-pin DIP socket. Supports MICROCHIP PIC17C42A,PIC17C43,PIC17C44.	HPIC.EXE
DIP	HEAD-SEEP	24-pin DIP socket. Supports serial PROM 93XX,24XX,25XX.(8-pin DIP)	HSEEP.EXE
DIP	HEAD-SM8951	40-pin DIP socket. Supports SYNCMOS SM2965,SM8951,SM89516, SM8952,SM8958.	HMPU51.EXE
DIP	HEAD-SST512-DP32	32-pin DIP socket. Supports SST SST27SF512,SST27SF256.	HEEP512.EXE
DIP	HEAD-STKUSB1	32-pin DIP socket. Supports SYNTEK STK99110N18P,STK99110N20P, STKUSB97DV03A.(18/20-pin DIP)	HMPU3.EXE
DIP	HEAD-T87C5101	32-pin DIP socket. Supports TEMIC T87C5101.(24-pin DIP)	HMPU51.EXE
DIP	HEAD-W78E378-DP32	32-pin DIP socket. Supports WINBOND W78E378; DYNACOLOR D16F78BE.	HMPU51.EXE

DIP	HEAD-Z86E08	32-pin DIP socket. Supports ZILOG Z86E08 186X,Z86E04 186X, Z86E02 1925.(18-pin DIP)	HMPUZ8.EXE
DIP	HEAD-Z86E83	32-pin DIP socket. Supports ZILOG Z86E83.(28-pin DIP)	HMPUZ8.EXE
DIP	HEAD-Z8E001	32-pin DIP socket. Supports ZILOG Z8E000/001.(18-pin DIP)	HMPUZ8.EXE
PLCC	HEAD-16V8-PL20	20-pin PLCC socket. Supports AMD,ATMEL,CYPRESS,LATTICE,NATIONAL, STM 16V8 series.	HPLD1.EXE
PLCC	HEAD-22V10-PL	28-pin PLCC socket. Supports AMD,ATMEL,LATTICE 22V10 series.	HPLD1.EXE
PLCC	HEAD-251A1-PL44	44-pin PLCC socket. Supports TEMIC TSC87251A1.	HMPU1.EXE
PLCC	HEAD-35LV040-PL	32-pin PLCC socket. Supports GTK AVF35LV040.	HMEM1.EXE
PLCC	HEAD-57C71C-PL	32-pin PLCC socket. Supports WSI 57C71C.	HBPPGM.EXE
PLCC	HEAD-57CXX-PL	28-pin PLCC socket. Supports WSI 57C191C/291C/43C/45C/49C.	HBPPGM.EXE
PLCC	HEAD-64F3334-PL	84-pin PLCC socket. Supports HITACHI HD64F3334CP,HD64F3337CP.	HMPU1.EXE
PLCC	HEAD-87C51MC2-PL	44-pin PLCC socket. Supports PHILIPS 87C51MC2.	HMPU2.EXE
PLCC	HEAD-87C748-PL	28-pin PLCC socket. Supports PHILIPS 87C748/750/751.	HMPU2.EXE
PLCC	HEAD-87C749-PL	28-pin PLCC socket. Supports PHILIPS 87C749/752.	HMPU2.EXE

PLCC	HEAD-89C51CC01-PL	44-pin PLCC socket. Supports ATMEL T89C51CC01,T89C51AC2.	HMPU1.EXE
PLCC	HEAD-89L516-PL44	44-pin PLCC socket. Supports MEGAWIN MPC89L516.	HMPU2.EXE
PLCC	HEAD-AVR8515-PL	44-pin PLCC socket. Supports ATMEL 90S4414,90S8515.	HMPU1.EXE
PLCC	HEAD-COP87L-PL44	44-pin PLCC socket. Supports NATIONAL COP87L88Cx-Gx,COP87L88Hx-Rx.	HCOP.EXE
PLCC	HEAD-COP8SXX-PL	44-pin PLCC socket. Supports NATIONAL COP8SAX/SGE744/SGR744V.	HCOP.EXE
PLCC	HEAD-DIP40-PL44	44-pin PLCC socket. Supports word wide EPROM,EEPROM memory in PLCC44 package.	HMEMW.EXE
PLCC	HEAD-EP1M-PL32	32-pin PLCC socket. Supports byte wide (above 1M bits) EPROM,EEPROM, FLASH memory in PLCC32 package.	HEP512.EXE HEP1M.EXE HEEP512.EXE HMEM1.EXE
PLCC	HEAD-EP512-PL32	32-pin PLCC socket. Supports byte wide (below 512k bits) EPROM,EEPROM, FLASH memory in PLCC32 package.	HEEP512.EXE HEP512.EXE
PLCC	HEAD-FWH-PL32	32-pin PLCC socket. Supports INTEL 2802; PMC 49LP002; SST 49LF002/003/004/008/040/080; STM 50FW040; WINBOND 39V040,49V002.	HFMEM.EXE HMEM1.EXE
PLCC	HEAD-IS89C64-PL44	44-pin PLCC socket. Supports ICSI,ISSI IS89C(E)54/58/64.	HMPU51.EXE

PLCC	HEAD-MPU51A-PL44	44-pin PLCC socket. Supports ATMEL 89C55; ISSI 89C51/52,89LV52; PHILIPS 89C738; WINBOND 78E516/58/62,78LE516/58.	HMPU51.EXE
PLCC	HEAD-MPU51-PL44	44-pin PLCC socket. Supports 87C51/89C51 series.	HMPU51.EXE
PLCC	HEAD-MPU51RD2-PL	44-pin PLCC socket. Supports MXIC MX10FMAXDQC; PHILIPS 89C132/138/238/638/838,89C51/52/54/58 U(XX), 89C51Fx/Rx+/Rx2/66x series.	HMPU2.EXE
PLCC	HEAD-MTV112M-PL	44-pin PLCC socket. Supports MYSON MTV112M.	HMPU1.EXE
PLCC	HEAD-MTV112-PL	44-pin PLCC socket. Supports MYSON MTV112.	HMPU1.EXE
PLCC	HEAD-MTV230M-PL	44-pin PLCC socket. Supports MYSON MTV230MV.	HMPU1.EXE
PLCC	HEAD-MTV512X-PL44	44-pin PLCC socket. Supports MYSON MTV512X,CS8954X.	HMPU1.EXE
PLCC	HEAD-MTVX12M-PL	44-pin PLCC socket. Supports MYSON MTV212MV32,MTV212MV64U/I, MTV312MV64,MTV412MV128.	HMPU1.EXE
PLCC	HEAD-NT68F632L-PL	44-pin PLCC socket. Supports NOVATEK NT68F632L.	HMPU1.EXE
PLCC	HEAD-P89LPC932-PL	28-pin PLCC socket. Supports PHILIPS 89LPC932.	HMPU2.EXE
PLCC	HEAD-PIC16C64-PL	44-pin PLCC socket. Supports MICROCHIP PIC16C64/65/74, PIC16F871/874/877.	HPIC.EXE HPIC18.EXE HPIC2.EXE

PLCC	HEAD-PIC17C42-PL	44-pin PLCC socket. Supports MICROCHIP PIC17C42A,PIC17C43,PIC17C44.	HPIC.EXE
PLCC	HEAD-PSD3-PL44	44-pin PLCC socket. Supports WSI PSD3 series.	HPSD3.EXE
PLCC	HEAD-SM59264-PL	44-pin PLCC socket. Supports SYNCMOS SM59264.	HMPU51.EXE
PLCC	HEAD-SM8951-PL	44-pin PLCC socket. Supports SYNCMOS SM2965,SM8951,SM89516, SM8952,SM8958.	HMPU51.EXE
PLCC	HEAD-SST512-PL32	32-pin PLCC socket. Supports SST SST27SF512,SST27SF256.	HEEP512.EXE
PLCC	HEAD-T89C51-PL44	44-pin PLCC socket. Supports ATMEL T89C51RC2.	HMPU51.EXE
PLCC	HEAD-W78E378-PL	44-pin PLCC socket. Supports WINBOND W78E378P.	HMPU51.EXE
PLCC	HEAD-Z86E34-PL	28-pin PLCC socket. Supports ZILOG Z86733,Z86E34,Z86E33.	HMPUZ8.EXE
QFP	HEAD-6473827-Q	80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports HITACHI HD6473827H.	HMPU1.EXE
QFP	HEAD-64F3644-Q	64-pin QFP(PITCH 0.8mm,14x14mm) socket. Supports HITACHI HD64F3644H.	HMPU1.EXE
QFP	HEAD-64F3687-LQ	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports HITACHI HD64F3664FP,HD64F3687FP. (64-pin LQFP)	HMPU1.EXE
QFP	HEAD-64F3687-Q	64-pin QFP(PITCH 0.8mm,14x14mm) socket. Supports HITACHI HD64F3687H,HD64F3664H.	HMPU1.EXE
QFP	HEAD-86PM29A-Q	64-pin QFP(PITCH 0.8mm,14x14mm) socket. Supports TOSHIBA TMP86PM29AF.	HMPU1.EXE

QFP	HEAD-86PM29A-TQ	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports TOSHIBA TMP86PM29AU.(64-pin TQFP)	HMPU1.EXE
QFP	HEAD-87C695-Q	80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports PHILIPS 87C190/290/390/395/495/690/695.	HMPU1.EXE
QFP	HEAD-87CE560-Q80	80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports PHILIPS 87CE560/598,89C557E4,89CE558.	HMPU1.EXE
QFP	HEAD-87PS68-TQ	80-pin QFP(PITCH 0.5mm,12x12mm) socket. Supports TOSHIBA TMP87PP21DF,TMP87PS68. (80-pin TQFP)	HMPU1.EXE
QFP	HEAD-89C51CC01-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ATMEL T89C51CC01.	HMPU1.EXE
QFP	HEAD-89L516-Q44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports MEGAWIN MPC89L516.	HMPU2.EXE
QFP	HEAD-ATMEGA128-TQ64	64-pin QFP(PITCH 0.8mm,14x14mm) socket. Supports ATMEL ATMEGA128.(64-pin TQFP)	HMPU1.EXE
QFP	HEAD-AVR4433-Q	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports ATMEL 90S4433/2333,90LS4433/2333.	HMPU1.EXE
QFP	HEAD-AVR8515-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ATMEL 90S4414,90S8515.	HMPU1.EXE
QFP	HEAD-AVR8535-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ATMEL 90S/LS4434,90S/LS8535.	HMPU1.EXE
QFP	HEAD-H8/3048-Q	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports HITACHI HD6473048F.	HMPU1.EXE
QFP	HEAD-H8/3062F-TQ	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports HITACHI HD64F3062/64.	HMPU1.EXE
QFP	HEAD-IS89C64-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ICSI,ISSI IS89C(E)54/58/64.	HMPU51.EXE

QFP	HEAD-LPC47N250-Q	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports SMSC LPC47N250.(100-pin TQFP)	HMPU2.EXE
QFP	HEAD-M37515-Q	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports MITSUBISHI M37515E4HP,M37516E6HP.	HMPU1.EXE
QFP	HEAD-M37531-Q	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports MITSUBISHI M37531E4GP.	HMPU1.EXE
QFP	HEAD-M37542-Q	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports RENESAS M37542F8GP.	HMPU6.EXE
QFP	HEAD-M37640-Q	80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports MITSUBISHI M37640E8FP.	HMPU1.EXE
QFP	HEAD-M37710-Q	80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports MITSUBISHI M37712E4BFP.	HMPU1.EXE
QFP	HEAD-M38227-Q	80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports MITSUBISHI M38227ECFP.	HMPU1.EXE
QFP	HEAD-M38867-TQ	80-pin QFP(PITCH 0.5mm,12x12mm) socket. Supports MITSUBISHI M38203E4HP,M38207E8HP, M38223E4HP,M38867E8HP.(80-pin TQFP)	HMPU1.EXE
QFP	HEAD-MPU51A-Q44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ATMEL AT89C55WD; WINBOND W78E516,W78LE516/58.	HMPU51.EXE
QFP	HEAD-MPU51-Q44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports 8751/89C51 series.	HMPU51.EXE
QFP	HEAD-MPU51RD2-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports PHILIPS 89C132/138/238/638/838, 89C51/52/54/58 U(XX),89C51Fx/Rx+/Rx2/66x series.	HMPU2.EXE
QFP	HEAD-MPU51RD2-QF64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports TEMIC T89C51RD2 QF64.	HMPU51.EXE

QFP	HEAD-MX10F20X-Q	100-pin QFP(PITCH 0.65mm,14x20mm) socket. Supports MXIC MX10F201FC.	HMPU2.EXE
QFP	HEAD-PIC16C64-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports MICROCHIP PIC16C64/65/74, PIC16F871/874/877.	HPIC.EXE HPIC18.EXE HPIC2.EXE
QFP	HEAD-PIC16C925-TQ64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports MICROCHIP PIC16C923/924/925/926, PIC18F6620/6720.(64-pin TQFP)	HPIC.EXE HPIC18.EXE
QFP	HEAD-PSD3-Q44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports WSI PSD3 series.	HPSD3.EXE
QFP	HEAD-S3P9228-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports SAMSUNG S3P9228.(44-pin TQFP)	HMPU1.EXE
QFP	HEAD-SABC505-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports SIEMENS SAFC505CA-4EM.	HMPU1.EXE
QFP	HEAD-SM8951-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports SYNCMOS SM2965,SM8951,SM89516, SM8952,SM8958.	HMPU51.EXE
QFP	HEAD-ST72C314-Q44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports STM ST72C314J2/J4.	HST72.EXE
QFP	HEAD-SX52BD-Q	52-pin QFP(PITCH 0.65mm,10x10mm) socket. Supports UBICOM SX52BD/PQ.	HMPU7.EXE
QFP	HEAD-T89C51-Q44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ATMEL T89C51RC2; SST SST89E564.	HMPU51.EXE
QFP	HEAD-W78E61-Q48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports WINBOND W78E61.	HMPU51.EXE
QFP	HEAD-Z89371-Q	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ZILOG Z89371.	HMPUZ8.EXE

SDIP	HEAD-64F3644-SD	64-pin SDIP(PITCH 1.778mm,800mil) socket. Supports HITACHI HD64F3644P.	HMPU1.EXE
SDIP	HEAD-78P083-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports NEC UPD78P083CU.	HMPU1.EXE
SDIP	HEAD-87C380-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports PHILIPS 87C380.	HMPU1.EXE
SDIP	HEAD-87C390-SD	56-pin SDIP(PITCH 1.778mm,600mil) socket. Supports PHILIPS 87C190/290390/690(56-pin SDIP), 87C391(52-pin SDIP).	HMPU1.EXE
SDIP	HEAD-87C695-SD	64-pin SDIP(PITCH 1.778mm,800mil) socket. Supports PHILIPS 87C395/495/695.	HMPU1.EXE
SDIP	HEAD-87C766-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports PHILIPS 87C766.	HMPU1.EXE
SDIP	HEAD-87C770-SD	56-pin SDIP(PITCH 1.778mm,600mil) socket. Supports PHILIPS 87C770.(52-pin SDIP)	HMPU1.EXE
SDIP	HEAD-GMS81504-SD	32-pin SDIP(PITCH 1.78mm,400mil) socket. Supports HYNIX,LG-SEMICON GMS81504T.(30-pin SDIP)	HMPU1.EXE
SDIP	HEAD-GMS81608-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports LG-SEMICON GMS81608T.	HMPU1.EXE
SDIP	HEAD-MTVX12M-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports MYSON MTV212MS32,MTV212MS64U/I, MTV312MS64,MTV412MS128.	HMPU1.EXE
SDIP	HEAD-SAA4849-SD	56-pin SDIP(PITCH 1.778mm,600mil) socket. Supports PHILIPS SAA4849PS.(56-pin SDIP)	HSAA.EXE
SDIP	HEAD-Z90241-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports ZILOG Z90241.	HMPUZ8.EXE
SDIP	HEAD-Z90251-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports ZILOG Z90231,Z90251.	HMPUZ8.EXE

SDIP	HEAD-Z90351-SD	56-pin SDIP(PITCH 1.778mm,600mil) socket. Supports ZILOG Z90351.(52-pin SDIP)	HMPUZ8.EXE
SDIP	HEAD-Z90361-SD	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports ZILOG Z90361.	HMPUZ8.EXE
SOP	HEAD-16V8-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports AMD,ATMEL,LATTICE 16V8 series.(20-pin SOP)	HPLD1.EXE
SOP	HEAD-27C520-TS20	20-pin SOP(PITCH 0.65mm,4.6mm) socket. Supports WINBOND W27C520.(20-pin TSOP)	HEEP512.EXE
SOP	HEAD-29F016-TS48	48-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports AMD AM29F016-E/B-E.(48-pin TSOP)	HFMEM.EXE
SOP	HEAD-29LV065	48-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports SPANSION AM29LV065DU.(48-pin TSOP)	HFMEM.EXE
SOP	HEAD-29N16000-TS	44-pin SOP(PITCH 0.8mm,10.16mm) socket. Supports SAMSUNG KM29W16000ATS,KM29N16000ATS, KM29W32000ATS,KM29N32000ATS.(44-pin TSOP)	HFMEM.EXE
SOP	HEAD-29PL12LM-TS56	56-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports SPANSION MBM29PL12LM.(56-pin TSOP)	HMEMW.EXE
SOP	HEAD-45LF010-SO8	16-pin SOP(PITCH 1.27mm,4.2mm) socket. Supports SST SST45LF010.(8-pin SOP)	HSEEP.EXE
SOP	HEAD-75P0076-S	42-pin SOP(PITCH 0.8mm,7.2mm) socket. Supports NEC uPD75P0076GT.	HMPU1.EXE
SOP	HEAD-87LPC76X-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports PHILIPS 87LPC762,87LPC764,87LPC767. (20-pin SOP)	HMPU2.EXE
SOP	HEAD-87LPC76X-TS	20-pin SOP(PITCH 0.65mm,4.6mm) socket. Supports PHILIPS 87LPC762,87LPC764,87LPC767. (20-pin TSSOP)	HMPU2.EXE

SOP	HEAD-8XC54X2-TSS38T	38-pin SOP(PITCH 0.5mm,4.4mm) socket. Supports PHILIPS 87C54X2.(38-pin TSOP)	HMPU51.EXE
SOP	HEAD-AT1024-TS48	48-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports ATMEL 29C1024,29LV1024.(48-pin TSOP)	HMEMW.EXE
SOP	HEAD-AT25HP-SO16	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports ATMEL AT25HP512.(16-pin SOP)	HSEEP.EXE
SOP	HEAD-AT45DB-SO28	28-pin SOP(PITCH 1.27mm,9mm) socket. Supports ATMEL AT45DB081A.	HSEEP.EXE
SOP	HEAD-AT45DB-SO8	24-pin SOP(PITCH 1.27mm,5.5mm) socket. Supports ATMEL AT45DBXX.(8-pin SOP)	HSEEP.EXE
SOP	HEAD-AT45DB-TS28	28-pin SOP(PITCH 0.55mm,11.8mm) socket. Supports ATMEL AT45DB161B.(28-pin TSOP)	HSEEP.EXE
SOP	HEAD-COP8ACC-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports NATIONAL COP8ACC728.	HCOP.EXE
SOP	HEAD-COP8SXX-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports NATIONAL COP8SAA/SAB/SAC/SGESGR720, COP8SAA716,COP8SAB/SAC/SGE/SGR728. (16/20/28-pin SOP)	HCOP.EXE
SOP	HEAD-CY8C26233-SS	28-pin SOP(PITCH 0.65mm,5.3mm) socket. Supports CYPRESS CY8C26233-PVI.(20-pin SSOP)	HCY8C2X.EXE
SOP	HEAD-CY8C26443-SS	28-pin SOP(PITCH 0.65mm,5.3mm) socket. Supports CYPRESS CY8C26443-PVI.(28-pin SSOP)	HCY8C2X.EXE
SOP	HEAD-CYUSB1-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports CYPRESS CY7C630001A,CY7C63001/A, CY7C630011A,CY7C631001A,CY7C631011A.	HMPU3.EXE
SOP	HEAD-CYUSB2-S24	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports CYPRESS CY7C63612/613.(24-pin SOP)	HMPU3.EXE

SOP	HEAD-CYUSB2-SS48	56-pin SOP(PITCH 0.635mm,7.8mm) socket. Supports CYPRESS CY7C63410/411/412/413/510/511/ 512/513.(48-pin SSOP)	HMPU3.EXE
SOP	HEAD-CYUSB3-S28	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports CYPRESS CY7C65113.	HMPU3.EXE
SOP	HEAD-CYUSB3-SS48	56-pin SOP(PITCH 0.635mm,7.8mm) socket. Supports CYPRESS CY7C63013.(48-pin SSOP)	HMPU3.EXE
SOP	HEAD-CYUSB3-SS56	56-pin SOP(PITCH 0.635mm,7.8mm) socket. Supports CYPRESS CY7C66111/112/113.(56-pin SSOP)	HMPU3.EXE
SOP	HEAD-CYUSB4-S18	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports CYPRESS CY7C63722/723/231.(18-pin SOP)	HMPU3.EXE
SOP	HEAD-CYUSB6-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports CYPRESS CY7C63743.(24-pin SOP)	HMPU3.EXE
SOP	HEAD-CYUSB7-S28	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports CYPRESS CY7C64013.	HMPU3.EXE
SOP	HEAD-CYUSB7-SS48	56-pin SOP(PITCH 0.635mm,7.8mm) socket. Supports CYPRESS CY7C64113.(48-pin SSOP)	HMPU3.EXE
SOP	HEAD-DIP40-TS40	40-pin SOP(PITCH 0.5mm,12.4mm) socket. Supports word wide EPROM,EEPROM memory in TSOP40 package.(40-pin TSOP)	HMEMW.EXE
SOP	HEAD-EM78P156-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports EMC EM78P154,EM78P156.(18-pin SOP)	HMPU3.EXE
SOP	HEAD-EM78PX47A-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports EMC EM78P247A,EM78P447A.	HMPU3.EXE
SOP	HEAD-EP1M-S32	32-pin SOP(PITCH 1.27mm,11.6mm) socket. Supports byte wide (above 1M bits) EPROM memory in SOP32 package.	HEP1M.EXE

SOP	HEAD-EP1M-TS32	32-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports byte wide (above 1M bits) EPROM,EEPROM, FLASH memory in TSOP32 package.(32-pin TSOP)	HEP1M.EXE HMEM1.EXE
SOP	HEAD-EP1M-TS32A	32-pin SOP(PITCH 0.5mm,12mm) socket. Supports SANYO LE28FV2001A; SST 29VF040,37VF010/020/040/512,39LF020,39SF040, 39VF010/020/020P/040/512.(32-pin TSOP)	HMEM1.EXE
SOP	HEAD-EP42-PS44	44-pin SOP(PITCH 1.27mm,13.6mm) socket. Supports EPROM in PSOP44 package.(44-pin PSOP)	HMEMW.EXE
SOP	HEAD-EP512-S28	28-pin SOP(PITCH 1.27mm,8.45mm) socket. Supports byte wide (below 512k bits) EPROM,EEPROM, FLASH memory in SOP28 package.	HEEP512.EXE HEP512.EXE
SOP	HEAD-EP512-S28A	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports MICROCHIP 27C64/128/256/512/513, 27HC64/256,27LV64/256/512.	HEEP512.EXE HEP512.EXE
SOP	HEAD-EP512-S28B	28-pin SOP(PITCH 1.27mm,9mm) socket. Supports ATMEL AT27C256R,AT27C512R.	HEEP512.EXE HEP512.EXE
SOP	HEAD-EP512-TS28	28-pin SOP(PITCH 0.55mm,11.8mm) socket. Supports ATMEL AT27BV512,AT27C512R.(28-pin TSOP)	HEEP512.EXE HEP512.EXE
SOP	HEAD-FMEM-PS44	44-pin SOP(PITCH 1.27mm,13.6mm) socket. Supports AMD,FUJITSU,HYNIX,HYUNDAI,MICRON, MXIC,STM 29F200/400/800,29LV800; AMIC 29400/800; ATMEL 49F/BV8192; INTEL 28F400/800.(44-pin PSOP)	HMEMW.EXE
SOP	HEAD-FMEM-SS56	56-pin SOP(PITCH 0.8mm,13.3mm) socket. Supports INTEL 28F160,28F320,28F640.(56-pin SSOP)	HMEMW.EXE
SOP	HEAD-FMEM-TS48V2	48-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports all 48-pin TSOP FLASH memory over 1MB. (48-pin TSOP)	HMEMW.EXE

SOP	HEAD-FMEM-TS56	56-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports INTEL 28F128/160/320/640; SHARP 28F160.(56-pin TSOP)	HMEMW.EXE
SOP	HEAD-HT25LC512-SOP8	16-pin SOP(PITCH 1.27mm,4.2mm) socket. Supports HOLTEK HT25LC512.(8-pin SOP)	HSEEP.EXE
SOP	HEAD-HT48RA0-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports HOLTEK HT48RA0.(20/24-pin SOP)	HMPU3.EXE
SOP	HEAD-M29KW-TS48	48-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports AMD Am29LV640MB/641D; ATMEL AT49BV322A; FUJITSU MBM29LV650/651UE; MXIC MX26L6420TC,MX29LV640B/T; SHARP LH28F320BFHE/640BFE; STM M28W640ECT,M29KW032E/064E.(48-pin TSOP)	HMEMW.EXE
SOP	HEAD-M37531-SS	36-pin SOP(PITCH 0.8mm,8.5mm) socket. Supports MITSUBISHI M37531E8FP,M37532E8FP. (36-pin SSOP)	HMPU1.EXE
SOP	HEAD-MPU2051-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports ATMEL AT89C2051/1051,AT90S1200, AT90S2313; LG-SEMICON GMS97C2051/1051.(20-pin SOP)	HMPU1.EXE
SOP	HEAD-MPU8P-S	24-pin SOP(PITCH 1.27mm,5.5mm) socket. Supports ATMEL AT90S2323/2343,AT90LS2323/2343, ATtiny12L/15L; MICROCHIP PIC12C508/509,PIC12CE518/519.(8-pin SOP)	HMPU4.EXE
SOP	HEAD-MPU8P-SN	16-pin SOP(PITCH 1.27mm,4.2mm) socket. Supports MICROCHIP PIC12C508A,PIC12C509A. (8-pin SOP)	HMPU4.EXE
SOP	HEAD-MX25XX-SO28	28-pin SOP(PITCH 1.27mm,9mm) socket. Supports MXIC MX25L802,MX25L1602.	HSEEP.EXE

SOP	HEAD-MX29F1-PS44	44-pin SOP(PITCH 1.27mm,13.6mm) socket. Supports MXIC MX29F1610,MX29L1611.(44-pin PSOP)	HMEMW.EXE
SOP	HEAD-MX29F1-TS48	48-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports MXIC MX29F1610.(48-pin TSOP)	HMEMW.EXE
SOP	HEAD-P89LPC932-TS	28-pin SOP(PITCH 0.65mm,4.4mm) socket. Supports PHILIPS 89LPC932.(28-pin TSOP)	HMPU2.EXE
SOP	HEAD-PIC16C432-SS	30-pin SOP(PITCH 0.65mm,5.7mm) socket. Supports MICROCHIP PIC16C432.(20-pin SSOP)	HPIC.EXE
SOP	HEAD-PIC16C505-S	16-pin SOP(PITCH 1.27mm,4.2mm) socket. Supports MICROCHIP PIC16C505.(14-pin SOP)	HPIC.EXE
SOP	HEAD-PIC16C54-SSV2	30-pin SOP(PITCH 0.65mm,5.7mm) socket. Supports MICROCHIP PIC16C54/554/556/558/56/58/620/ 621/622/710/711/715,PIC16CE625,PIC16F627/628, PIC16LC716,PIC16LF819.(20-pin SSOP)	HPIC.EXE HPIC2.EXE
SOP	HEAD-PIC16C54-SV2	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports MICROCHIP PIC16C54/554/556/558/56/58/61/ 620/621/622/71/710/711/712/715/716/84,PIC16CE624/625, PIC16F627/628/648/83/84/87,PIC16LC717/84, PIC16LF628/83/84.(18-pin SOP)	HPIC.EXE HPIC2.EXE
SOP	HEAD-PIC16C55-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports MICROCHIP PIC16C55/57.	HPIC.EXE
SOP	HEAD-PIC16C62-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports MICROCHIP PIC16C62/63/642/66/72/73/76, PIC16LF872/873.(28-pin SOP)	HPIC.EXE HPIC18.EXE HPIC2.EXE
SOP	HEAD-PIC16C62-SS	28-pin SOP(PITCH 0.65mm,5.3mm) socket. Supports MICROCHIP PIC16C62/63PIC16LC72A. (28-pin SSOP)	HPIC.EXE HPIC18.EXE HPIC2.EXE

SOP	HEAD-PSOP44	44-pin SOP(PITCH 1.27mm,13.6mm) socket. Supports AMD 29F080/B,29F016/B; INTEL 28F008SA/SC,28FXXXS3/S5; MXIC 29F080MC.(44-pin PSOP)	HFMEM.EXE
SOP	HEAD-SEEP-SOP8	16-pin SOP(PITCH 1.27mm,4.2mm) socket. Supports serial PROM 93XX,24XX,25XX.(8-pin SOP)	HSEEP.EXE
SOP	HEAD-SEEP-TSSOP8V2	16-pin SOP(PITCH 0.65mm,4.4mm) socket. Supports serial PROM 93XX,24XX.(8-pin TSSOP)	HSEEP.EXE
SOP	HEAD-TSOP40	40-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports AMD,EON 29LV002/004/008/017/080/081/116; INTEL,MICRON,SHARP 28F002/004/008/016; MXIC 28F002,29LV004; SST 39VF016/080; STM 28F211/221/411/421,29W004/008.(40-pin TSOP)	HFMEM.EXE
SOP	HEAD-TSOP40AV2	40-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports AMD,EON,INTEL,MICRON,SHARP 29F080/016/032,28F004/008/016.(40-pin TSOP)	HFMEM.EXE
SOP	HEAD-TSOP48B	48-pin SOP(PITCH 0.5mm,18.5mm) socket. Supports SST SST39VF088; ACTRANS AC39VF088.(48-pin TSOP)	HFMEM.EXE
SOP	HEAD-UPD17P149-S	28-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports NEC uPD17P149GT.	HMPU1.EXE
SOP	HEAD-Z86E08-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports ZILOG Z86E08 186X,Z86E04 186X,Z86E02 1925. (18-pin SOP)	HMPUZ8.EXE
SOP	HEAD-Z86E08-SS	30-pin SOP(PITCH 0.65mm,5.7mm) socket. Supports ZILOG Z86E02 1925,Z86E08 186X.(20-pin SSOP)	HMPUZ8.EXE
SOP	HEAD-Z86E83-S	28-pin SOP(PITCH 1.27mm,7.6mm) socket. Supports ZILOG Z86E83.	HMPUZ8.EXE

